

# SpaceControl

A key fob for controlling security modes. Features a panic button for sending alarms to your inner circle and a security company in case of trouble.

- Authentication to prevent forgery
- Jamming detection and communication channels encryption
- Two-way communication

Calls for help in case of emergency	Activates full or partial alarm modes	Indicates command execution with color blink
-------------------------------------	---------------------------------------	--

## Principle of operation

The device controls the security modes and sends an alarm signal to the Central Monitoring Station by pressing the buttons on the key fob.

## Features

Authentication prevents replacement of the device and false alarms.

## Installation and set up

Ready to operate straight out the box: the battery is already installed, therefore there is no need to disassemble the detector. With one click, it can be connected to the hub in the mobile application.

## Tech specs

Classification	Four-button key fob with command delivery indication
Compatibility	Operates with all Ajax <a href="#">hubs</a> , and <a href="#">range extenders</a> , <a href="#">ocBridge Plus</a> , <a href="#">uartBridge</a>
Number of buttons	4
False alarm prevention	Yes, long press or double press (firmware version 5.54.1.0 or higher. Manufacture date from March 19, 2020)
Deactivation of the panic button	Available
Power supply	Battery: CR2032 battery

	Power supply voltage: 3 V Battery life — up to 5 years
Jeweller radio technology	Communication range with central unit — up to 1,300 m in an open space Two-way communication between devices Operating frequencies — 868.0-868.6 MHz Self-adjusting RF output power — up to 20 mW Block encryption based on AES algorithm Device polling period — 12–300 s
Operating temperature range	-25°C to +50°C
Permissible humidity	Up to 95%
Dimensions	65 × 37 × 10 mm
Weight	13 g
Certification	Grade 2, CE
Warranty	Replacement and repair within 24 months of the date of sale. Batteries are not covered under warranty.
Complete set	SpaceControl keyfob CR2032 battery (pre-installed) User's guide